

STAINLESS STEEL Y STRAINER THREADED BSP

Stainless steel Y strainer threaded female BSP for filtration of fluids in chemical and pharmaceutical industries, petrochemical industries, hydraulic installation, compressed air.

Strainer with removable filter and bolted bonnet

Threaded BSP draining cap allowing to install a draining valve.

2 PTFE gaskets for the bonnet and the cap.

Strainer in accordance with the regulation (EC) N° 1935/2004.



CE 1935/2004



TÜVRheinland[®]
PED/2014/68/UE



Size : DN1/4" to DN2"

Connection : Female BSP

Min Temperature : -50°C

Max Temperature : +200°C

Max Pressure : 16 Bars

Specifications : Removable stainless steel filter

Bolted bonnet with draining cap

PTFE gaskets

Materials : Stainless steel EN 1.4408

STAINLESS STEEL Y STRAINER THREADED BSP


SPECIFICATIONS :

- With draining cap
- Removable stainless steel filter
- Respect the flow direction indicated by the arrow
- Horizontal or vertical position with descendant fluid
- Mesh 10/10° mm (1000 μ)

USE :

- For Chemical and pharmaceutical industries, petrochemical industries, hydraulic installation, compressed air
- Do not use with steam
- Min and max Temperature Ts : - 50°C to + 200°C
- Max Pressure Ps : 16 bars

HEAD LOSS GRAPH :

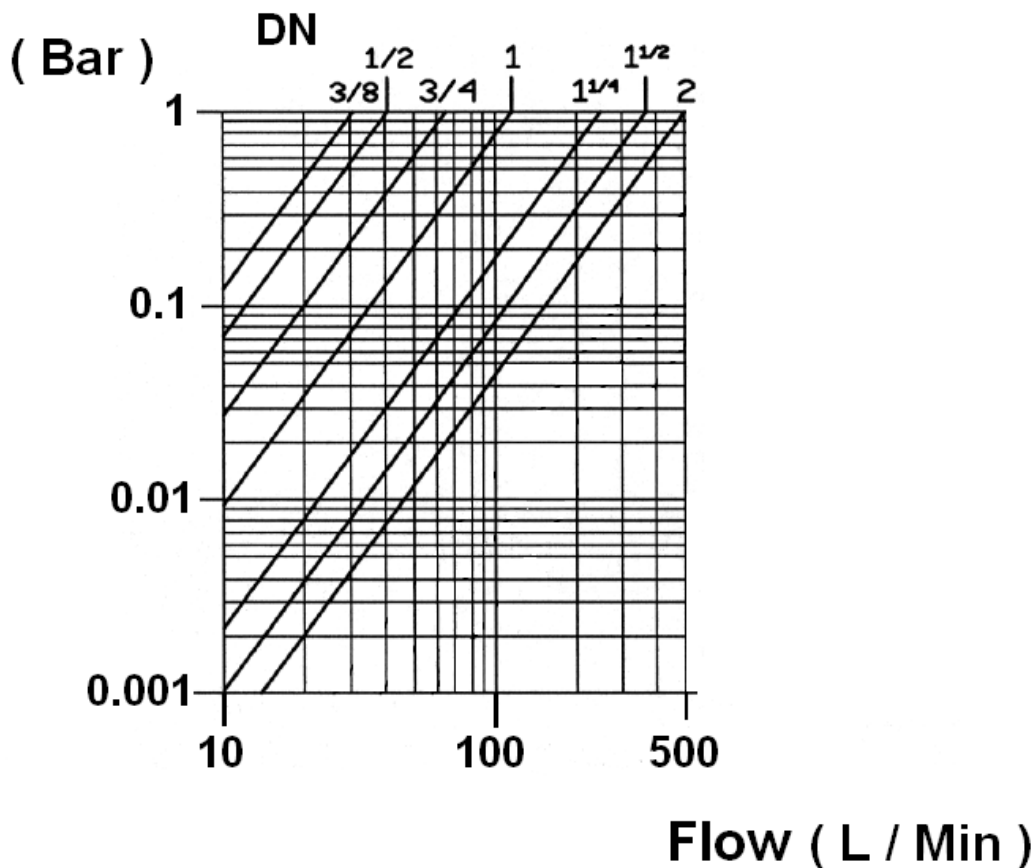


RANGE :

- Stainless steel threaded female BSP cylindrical ends **Ref. 230** from DN 1/4" to DN 2"


STAINLESS STEEL Y STRAINER THREADED BSP

PRESSURE / TEMPERATURE GRAPH (STEAM EXCLUDED) :

Pressure (Bar)

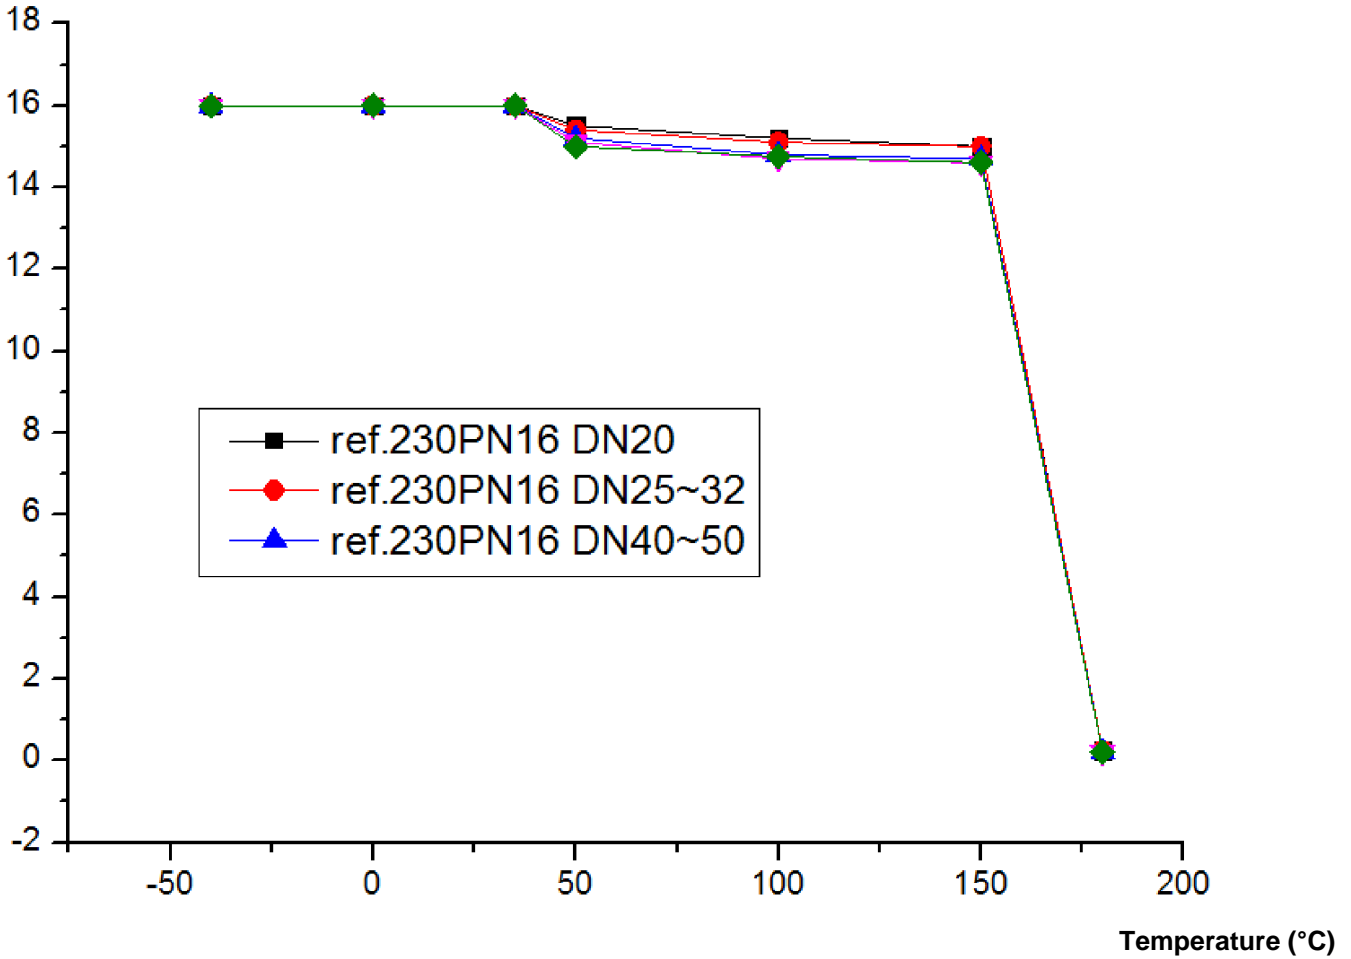


STAINLESS STEEL Y STRAINER THREADED BSP

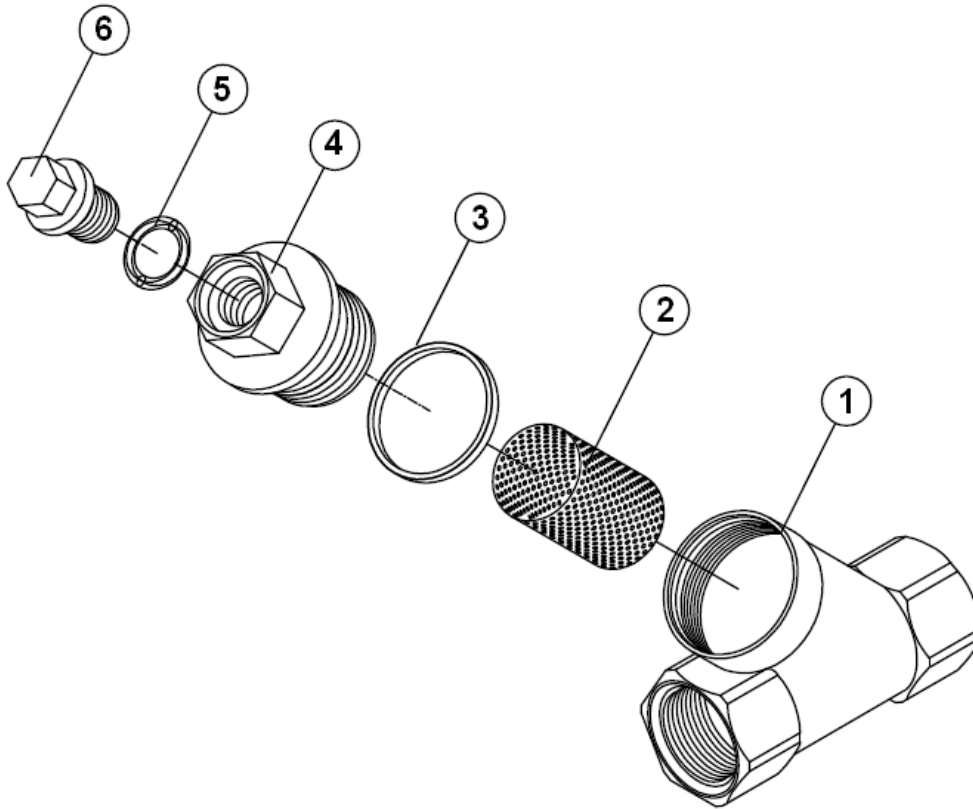MATERIALS :


Item	Designation	Materials
1	Body	EN 1.4408
2	Filter	AISI 304
3	Body gasket	PTFE
4	Bonnet	EN 1.4408
5	Cap gasket	PTFE
6	Cap	EN 1.4408

STAINLESS STEEL Y STRAINER THREADED BSP

SIZE (in mm) :

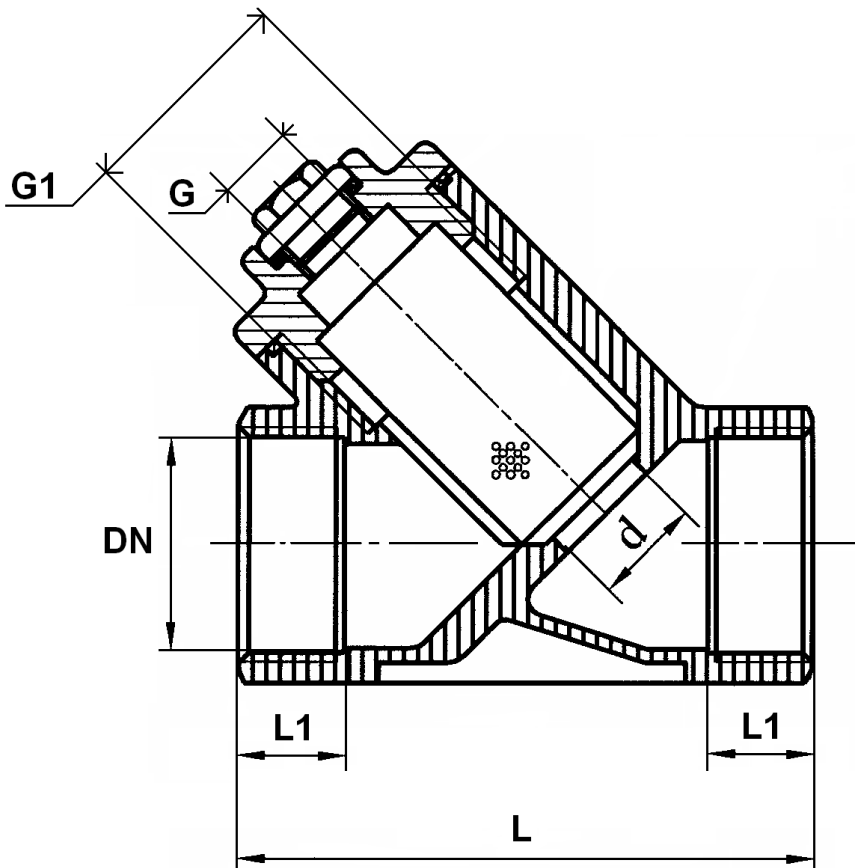



Filter size :

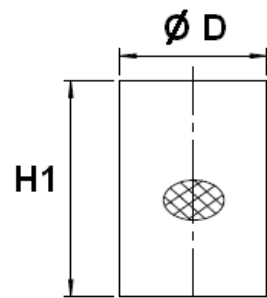

DN	1/4"	3/8"	1/2"	3/4"	1"	1"1/4	1"1/2	2"
L	64	64	64	80	89	106.5	118	139
L1	12	12	13	14.5	16.5	19	23	23
Ø d	10.5	12.5	15	20	25	32	38	50
G	1/4"	1/4"	1/4"	1/4"	3/8"	1/2"	1/2"	3/4"
G1	23.8 x 1.5	23,8 x 1.5	23,8 x 1.5	29,5 x 1.5	39,8 x 1.5	41,8 x 1.5	49,8 x 1.5	59,8 x 1.5
H1	28.5	28.5	28.5	40	49	54	63.5	76
Ø D	19	19	19	23	32	36	44	54
Weight (Kg)	0.23	0.21	0.21	0.35	0.61	0.89	1.11	1.63
Ref.	230002	230003	230004	230005	230006	230007	230008	230009

STAINLESS STEEL Y STRAINER THREADED BSP**STANDARDS :**

- Manufacturer certified ISO 9001 : 2015
- DIRECTIVE 2014/68/EU : CE N° 0035
Risk Category III Module H
- Certificate 3.1 on request
- Threaded BSP cylindrical female ends according to ISO 228/1
- Strainer in accordance with the regulation **(EC) N° 1935-2004 on request**

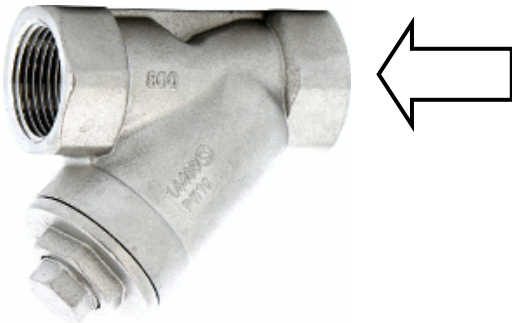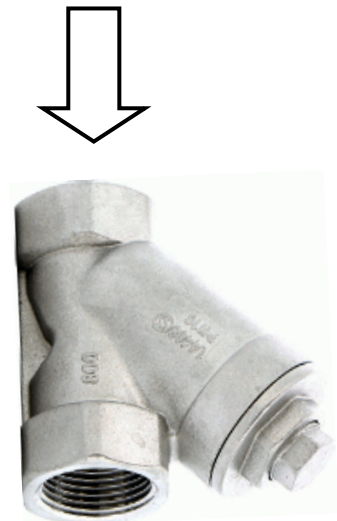INSTALLATION POSITIONS :**Horizontal position****Vertical position (descendand fluid)**

ADVICE : Our opinion and our advice are not guaranteed and SFERACO shall not be liable for the consequences of damages. The customer must check the right choice of the products with the real service conditions.

STAINLESS STEEL Y STRAINER THREADED BSP**INSTALLATION INSTRUCTIONS****GENERAL GUIDELINES :**

- Ensure that the strainers to be used are appropriate for the conditions of the installation (type of fluid, pressure and temperature).
- Be sure to have enough valves to be able to isolate the sections of piping as well as the appropriate equipment for maintenance and repair.
- Ensure that the strainers to be installed are of correct strength to be able to support the capacity of their usage.
- **Installation of all circuits should ensure that their function can be automatically tested on a regular basis (at least two times a year).**

INSTALLATION INSTRUCTIONS :

- **Before installing the strainers, clean and remove any objects from the pipes** (in particular bits of sealing and metal) which could obstruct and block the strainers.
- **Ensure that both connecting pipes either side of the strainer (upstream and downstream) are aligned (if they're not, the strainer may not work correctly).**
- **Make sure that the two sections of the pipe (upstream and downstream) match, the strainer unit will not absorb any gaps. Any distortions in the pipes may affect the tightness of the connection, the working of the strainer and can even cause a rupture.** To be sure, place the kit in position to ensure the assembling will work.
- The theoretical lengths given by ISO/R7 for the tapping are typically longer than required, the length of the thread should be limited, and **check that the end of the tube does not press right up to the head of the thread.**
- **Never use a vice to tighten the fixings of the strainer.**
- **If sections of piping do not have their final support in place, they should be temporarily fixed. This is to avoid unnecessary strain on the strainer.**
- **Fluids in the strainer must not contain solid objects (it could damaged the seat).**